


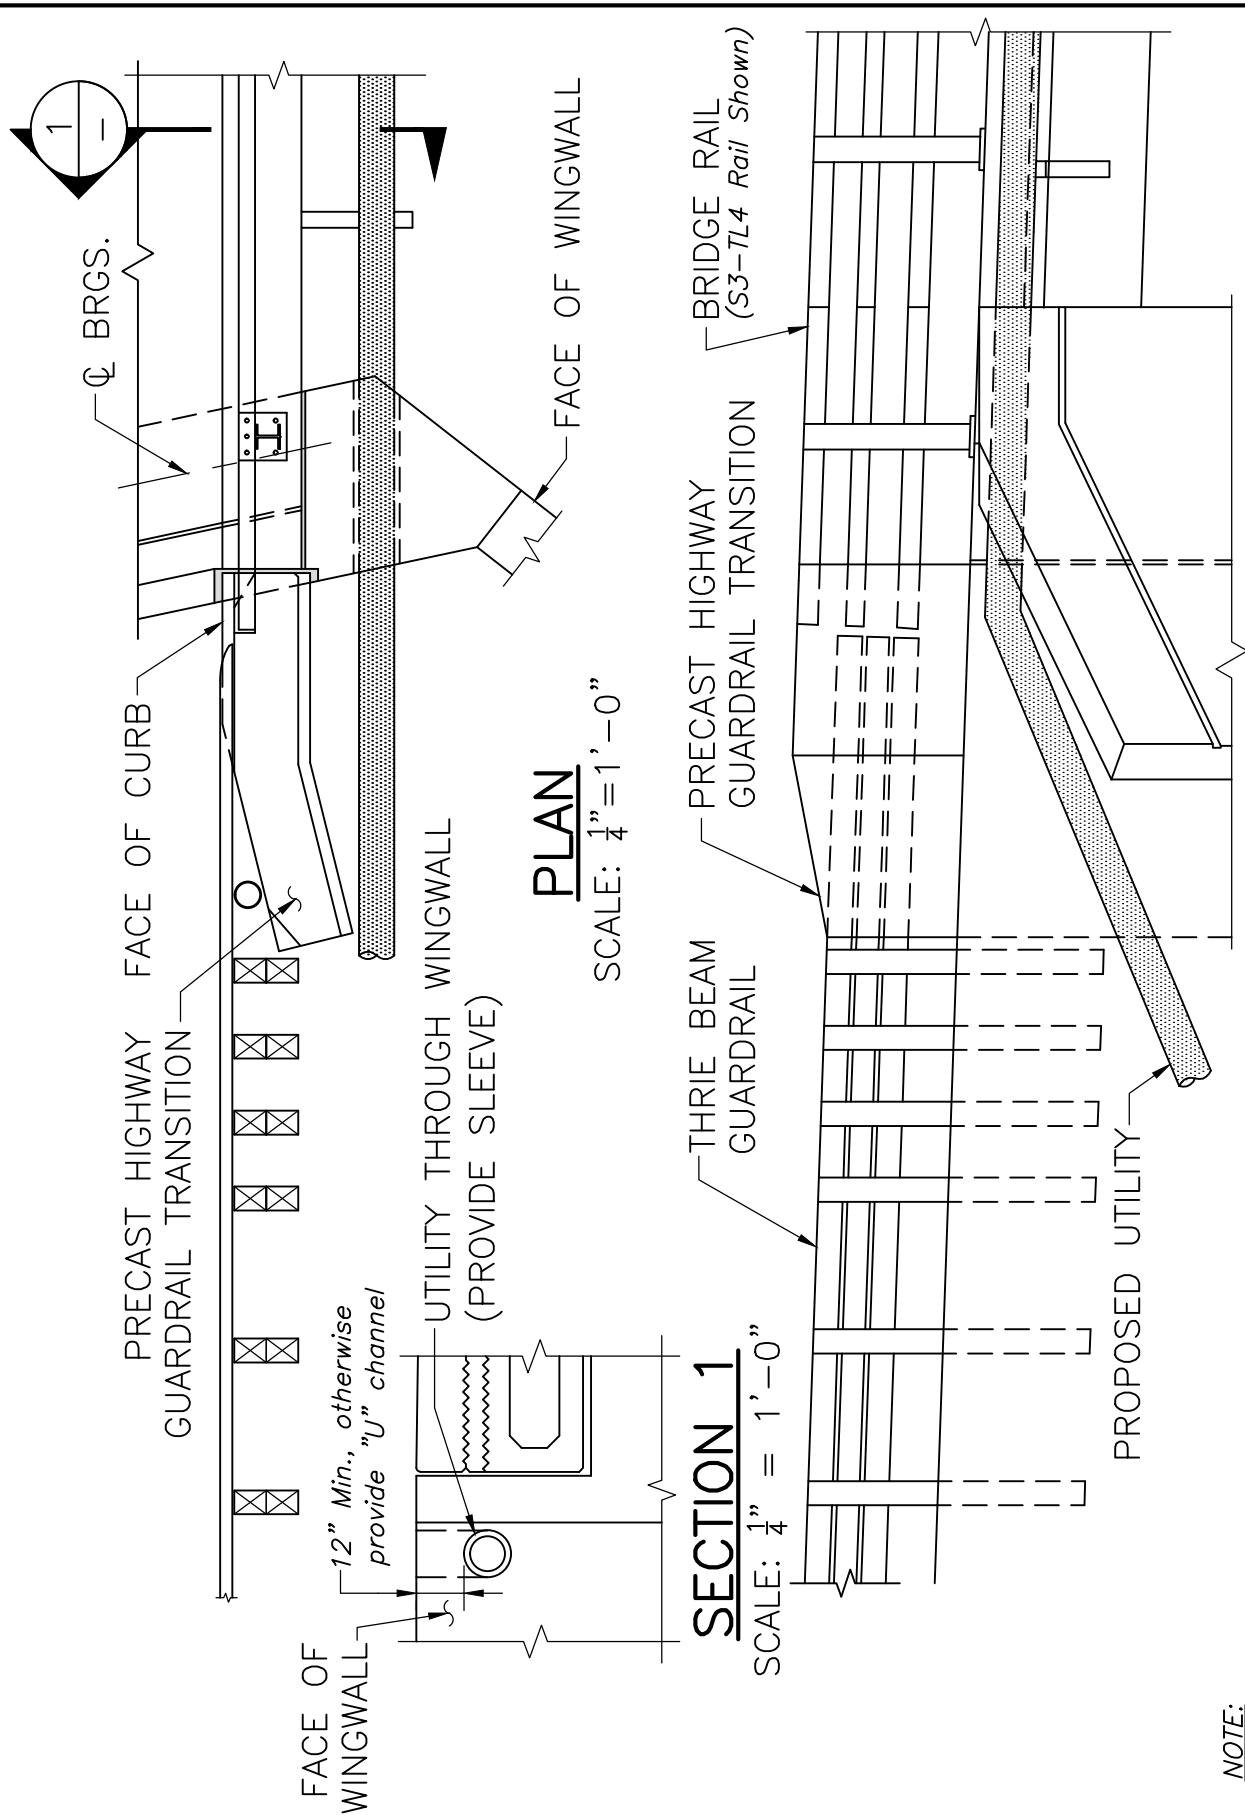

NOTE:

These details are to be used only if it is not feasible to run utility through a utility bay.

ELEVATION
SCALE: $\frac{1}{4}" = 1'-0"$



LRFD BRIDGE
MANUAL, PART II

UTILITY THRU
SPLAYED WINGWALL
ABUTMENT DETAILS

DATE OF ISSUE
JUNE 2013

DRAWING NUMBER
4.4.17