

Chevrolet
Bolt EUV
2022-

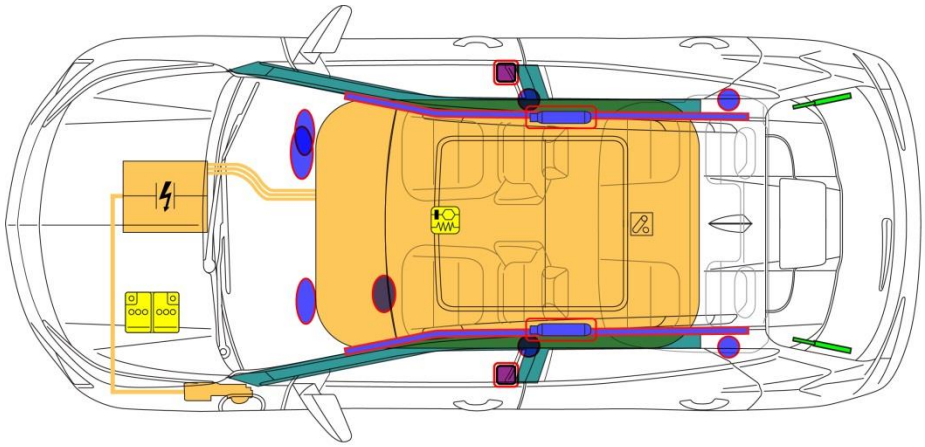

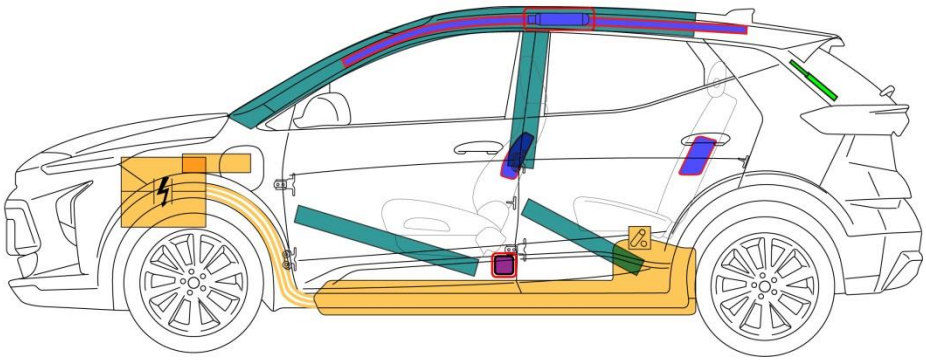



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

	Identification Number	Version Number	Page Number
	1G1-21202	1	1

1. Identification / recognition

Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.


Nameplate





The BOLT EUV can be identified by those emblems that appear on the front fender upper applique and the liftgate of the vehicle.


First Responder Information Label

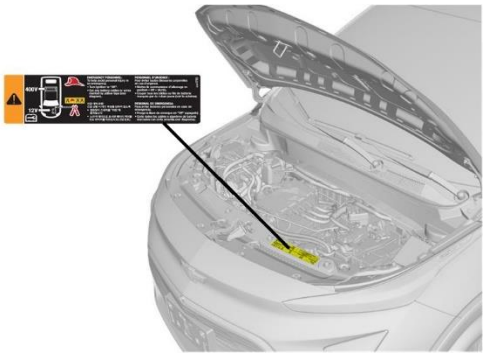


2. Immobilization / stabilization / lifting


IMMOBILIZE VEHICLE:

1. Block the wheels.
2. Pull the Electric Parking Brake (EPB) switch.
3. Press the P (Park) button.

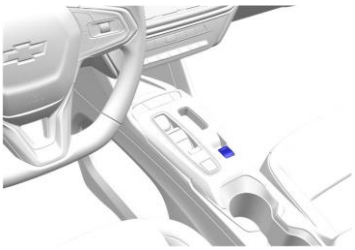

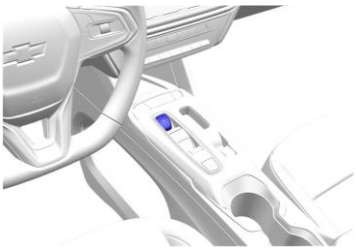

LIFTING POINTS:

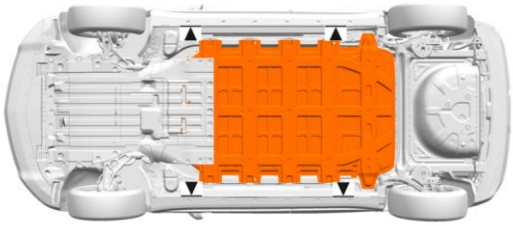

Indicates primary lifting locations.


3. Disable direct hazards / safety regulations

MAIN METHOD:

1. Press the POWER button to disable vehicle propulsion.
2. Remove the keys from the vehicle.
3. Open the hood.
4. Double cut the low voltage cable marked by the yellow tape.

<u>Do NOT cut any orange colored high voltage cables.</u>




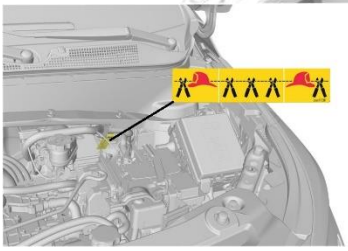

After disabling 12-volt power, wait at least 10 seconds to allow any un-deployed airbag reserve energy to dissipate and wait at least 1 minute to allow high voltage energy to discharge.


VEHICLE AT CHARGE STATION:

Terminate charging and disconnect the charge cable from the vehicle.

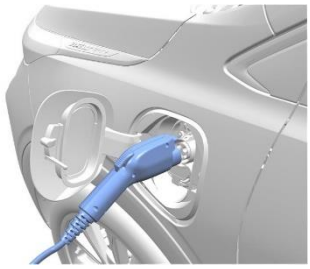


4. Access to the occupants

Refer to the front page for illustrations high strength zones and specific safety related component locations.

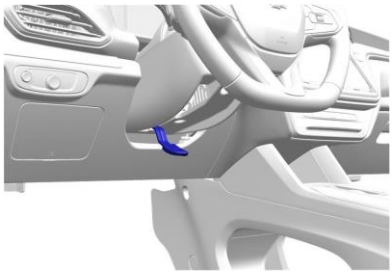

Steering Column Adjustment



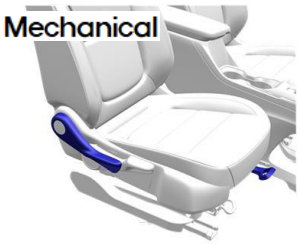

Seat Adjustment

- The windshield and the roof glass are made of Laminated Glass

- The side door windows and the liftgate window are made of Tempered Glass



5. Stored energy / liquids / gases / solids

Li-ion















Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

6. In case of fire















Potential for Battery Re-Ignition.



A battery on fire will not explode.



Use copious amounts of water to cool the battery to extinguish the fire.

7. In case of submersion


All high voltage components and the high voltage battery enclosure are connected to the vehicle chassis ground. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.

8. Towing / transportation / storage








Front Hook **Rear Hook**

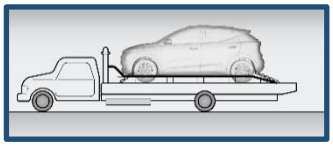

Flatbed towing is the best way to transport the vehicle.

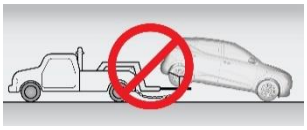

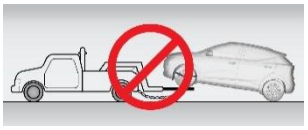

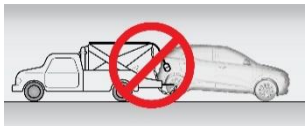

9. Important additional information

10. Explanation of pictograms used

	**Electric Vehicle**		**Flammable**
	**General warning sign**		**Toxic**
	**Warning, Electricity**		**Corrosive**
	**Battery Technology**		**Injury Risk**
	**Lifting Points**		**Use Water**
	**Thermal Imaging Camera**		