

Commonwealth of Massachusetts Oil Spill Response Training

Your Response Trailer



07/03/2007

Specifications of Trailer

- 20FT 10,000 lbs
- 8ft Wide
- 3 compartment
- 2-5/16 Ball
- Electric Brakes
- Tongue Weight:
- Rear drop down door
- Complete with Key and pad locks



Forward Compartment



Forward Compartment Supplies On Left Wall

- 20 Lb Anchors.
- 6ft Chain
- Shackles are on Anchors already
- 10 Anchor Buoys



Front Compartment on Right Wall



- Long Handled Brooms and Shovels.
- Sledge Hammers
- 8 Towing Bridles with Thimbles. Is fitted with a universal slide connector to fit both the 18" and 12"



Front Compartment Rear Wall

- Caution Tape
- First Aid Kit
- Eye Wash
- Chicken Boots
- Hand Cleaner
- Duct Tape
- Nitrile and leather gloves
- Safety Glasses
- Tool Box w/ Pliers, Cable Ties, Extra pins for Boom
- Portable Lights
- 3 xl Tyvek
- 5 spools of ½ inch rope




Middle Compartment



Middle Compartment

- 5 Bales of Sorbent Boom
- 2 Bales of Snare
- 5 bags of Speedy dry
- 10 rebar Steel Rods
- 5 bales of pads

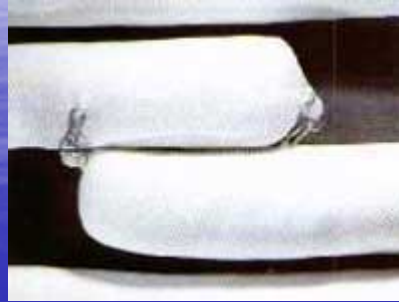

Middle Compartment

- 12", 18", 24" inflatable bladder for storm culvert.
- All fittings are on bladders
- Electric powered Air Compressor
- 2000 Watt generator



Rear Compartment



Two types of Boom

- (8) 100 ft sections of 18 inch harbor with Universal connectors.
- (4) 50ft sections of 12 inch harbor boom with Universal connectors.



Putting it all to work



First Line of Defense



- Setting up Boom