



**Massachusetts Department of Environmental Protection
Source Water Assessment and Protection (SWAP) Report
For
American Stone Mix, Inc.**

What is SWAP?

The Source Water Assessment and Protection (SWAP) program, established under the federal Safe Drinking Water Act, requires every state to:

- ? Inventory land uses within the recharge areas of all public water supply sources;
- ? Assess the susceptibility of drinking water sources to contamination from these land uses; and
- ? Publicize the results to provide support for improved protection.

SWAP and Water Quality

Susceptibility of a drinking water source does *not* imply poor water quality. Actual water quality is best reflected by the results of regular water tests.

Water suppliers protect drinking water by monitoring for more than 100 chemicals, treating water supplies, and using source protection measures to ensure that safe water is delivered to the tap.

Prepared by the
Massachusetts Department of
Environmental Protection,
Bureau of Resource Protection,
Drinking Water Program

Date Prepared:
January 26, 2003

Table 1: Public Water System (PWS) Information

<i>PWS NAME</i>	American Stone Mix, Inc.
<i>PWS Address</i>	Old Webster Road
<i>City/Town</i>	Oxford, Massachusetts
<i>PWS ID Number</i>	2226014
<i>Local Contact</i>	Michael Carnevale
<i>Phone Number</i>	(508) 987-5900

<i>Well Name</i>	<i>Source ID#</i>	<i>Zone I (in feet)</i>	<i>IWPA (in feet)</i>	<i>Source Susceptibility</i>
Well #1	2226014-01G	100	415	High

Introduction

We are all concerned about the quality of the water we drink. Drinking water wells may be threatened by many potential sources of contamination, including septic systems, road salting, and improper disposal of hazardous materials. Citizens and local officials can work together to better protect these drinking water sources.

Purpose of this report:

This report is a planning tool to support local and state efforts to improve water supply protection. By identifying land uses within water supply protection areas that may be potential sources of contamination the assessment helps focus protection efforts on appropriate best management practices (BMPs) and drinking water source protection measures. Department of Environmental Protection (DEP) staff are available to provide information about funding and other resources that may be available to your community.

This report includes:

1. Description of the Water System
2. Discussion of Land Uses within Protection Areas
3. Recommendations for Protection
4. Attachments, including a Map of the Protection Areas

1. Description of the Water System

The well for the American Stone Mix, Inc. is located outside of the on-site building to the east. The well has a Zone I of 100 feet and an Interim Wellhead Protection Area (IWPA) of 415 feet. The IWPA provides an interim protection area for a water supply well when the actual recharge area has not been delineated. The actual recharge area to the well may be significantly larger or smaller than the IWPA. The well is located in an aquifer with a high vulnerability to contamination due to the absence of hydrogeologic barriers that can prevent contaminant migration. Please refer to the attached map of the Zone I and IWPA. The well serving the facility has no treatment at this time. The DEP requires public water suppliers to monitor the quality of the water. For current information on monitoring

What is a Protection Area?

A well's water supply protection area is the land around the well where protection activities should be focused. Each well has a Zone I protective radius and an Interim Wellhead Protection Area (IWPA).

- **The Zone I** is the area that should be owned or controlled by the water supplier and limited to water supply activities.
- **The IWPA** is the larger area that is likely to contribute water to the well.

In many instances the IWPA does not include the entire land area that could contribute water to the well. Therefore, the well may be susceptible to contamination from activities outside of the IWPA that are not identified in this report.

What is Susceptibility?

Susceptibility is a measure of a well's potential to become contaminated due to land uses and activities within the Zone I and Interim Wellhead Protection Area (IWPA).

results and treatment, please contact the Public Water System contact person listed above in Table 1. Drinking water monitoring reporting data is also available on the web via EPA's Envirofacts website at http://www.epa.gov/enviro/html/sdwis/sdwis_query.html.

2. Discussion of Land Uses in the Protection Areas

There are a number of land uses and activities within the drinking water supply protection areas that are potential sources of contamination.

Key issues include:

1. **Inappropriate Activities in Zone I;**
2. **Manufacturing Activities;**
3. **Septic System;**
4. **Aboveground Storage Tanks; and**
5. **Small Quantity Generator of Hazardous Waste.**

The overall ranking of susceptibility to contamination for the well is high, based on the presence of at least one high threat land use or activity in the IWPA, as seen in Table 2.

1. **Zone I** – Currently, the well does not meet DEP's restrictions, which only allow water supply related activities in Zone I. The facility's Zone I contains on-site building, and some parking areas. The public water supplier owns and controls all land encompassed by the Zone I. Please note that systems not meeting DEP Zone I requirements must get DEP approval and address Zone I issues prior to increasing water use or modifying systems.

Recommendations:

- ✓ Remove all non-water supply activities from the Zone I to comply with DEP's Zone I requirements.
2. **Aboveground Storage Tank (AST)** – There are two 12,000-gallon tanks containing diesel and fuel that is used in their manufacturing process. The tanks are located in concrete vaults. If managed improperly, Aboveground Storage Tanks can be a potential source contamination due to leaks or spills of the chemicals they store.
- #### Recommendations:
- ✓ Ensure that vaults for aboveground storage tanks are "water tight" and able to hold 110% of the tank volume should a spill occur.

Table 2: Table of Activities within the Water Supply Protection Areas

Potential Contaminant Sources	Zone I	IWPA	Threat	Comments
Very Small Quantity Generator of Hazardous Waste	Yes	Yes	Moderate	Contained in drums
Parking lot	Yes	Yes	Moderate	Limit road salt usage and provide drainage away from wells
Manufacturing Activities	Yes	Yes	High	
Septic System	No	Yes	Moderate	See septic systems brochure in the appendix
Aboveground Storage Tanks	No	Yes	Moderate	Tanks contained in concrete vault
Hazardous Material Storage	No	Yes	High	Grease cutter
Structures	Yes	Yes	-	Non-water supply structures in Zone I

* -For more information on Contaminants of Concern associated with individual facility types and land uses please see the SWAP Draft Land Use / Associated Contaminants Matrix on DEP's website - www.state.ma.us/dep/brp/dws/.

Glossary

Zone I: The area closest to a well; a 100 to 400 foot radius proportional to the well's pumping rate. To determine your Zone I radius, refer to the attached map.

IWPA: A 400 foot to ½ mile radius around a public water supply well proportional to its pumping rate; the area DEP recommends for protection in the absence of a defined Zone I I. To determine IWPA radius, refer to the attached map.

Zone II: The primary recharge area defined by a hydrogeologic study.

Aquifer: An underground water-bearing layer of permeable material that will yield water in a usable quantity to a well.

Hydrogeologic Barrier: An underground layer of impermeable material that resists penetration by water.

Recharge Area: The surface area that contributes water to a well.

- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices. Any modifications to the AST must be accomplished in a manner consistent with Massachusetts's plumbing, building, and fire code requirements. Consult with the local fire department for any additional local code requirements regarding ASTs.

3. Septic system - The septic system for the facility is located within the IWPA. If a septic system fails or is not properly maintained it could be a potential source of microbial contamination. Improper disposal of household hazardous chemicals to septic systems is a potential source of contamination to the water supply.

Recommendations:

- ✓ Ensure that hazardous materials do not enter the septic system.
- ✓ Participate with the Town of Oxford in its household hazardous waste collection to discard of spent chemicals.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis. Refer to the attachments for more information regarding septic systems.

4. Small Quantity Hazardous Waste Generator (VSQG) – As a result of the daily operations at the site, small quantities of hazardous waste are generated. The waste is removed periodically by a licensed hauler.

5. Hazardous materials storage and use - As a result of the daily operations at the facility, grease cutters and other solvents are stored at the site. They are stored in well-labeled containers, in a secure and properly labeled area within the IWPA.

Recommendations:

- ✓ Continue to use BMPs to ensure the proper handling and storage of hazardous materials.

Implementing the following recommendations will reduce the system's susceptibility to contamination.

3. Protection Recommendations

Implementing protection measures and best management practices (BMPs) will reduce the well's susceptibility to contamination. American Stone Mix, Inc. should review and adopt the key recommendations above and the following:

Zone I:

- ✓ Keep non-water supply activities out of the Zone I.
- ✓ Consider well relocation if Zone I threats cannot be mitigated.
- ✓ Since American Stone Mix, Inc. intends to continue utilizing the structures in the Zone I, use BMPs and restrict activities that could pose a threat to the water supply.

Training and Education:

- ✓ Train staff on proper hazardous material use, disposal, emergency response, and best management practices; include custodial staff, groundskeepers and certified operator.
- ✓ Post drinking water protection area signs at key visibility locations.

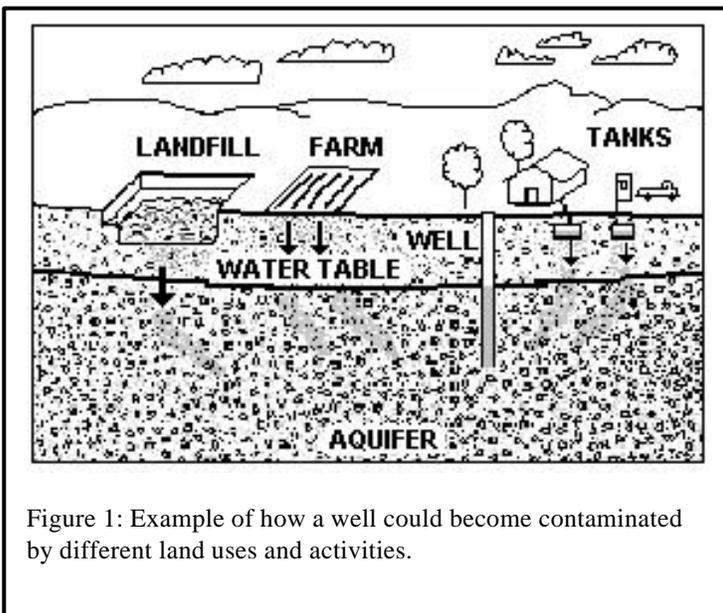


Figure 1: Example of how a well could become contaminated by different land uses and activities.

For More Information:

Contact Josephine Yemoh-Ndi in DEP's Worcester Office at (508) 792-7650 x 4030 for more information and for assistance in improving current protection measures.

More information relating to drinking water and source protection is available on the Drinking Water Program web site at:

www.state.ma.us/dep/brp/dws/

Additional Documents:

To help with source protection efforts, more information is available by request or online at www.state.ma.us/dep/brp/dws/, including:

1. Water Supply Protection Guidance Materials such as model regulations, Best Management Practice information, and general water supply protection information.
2. MA DEP SWAP Strategy
3. Land Use Pollution Potential Matrix
4. Draft Land/Associated Contaminants Matrix

Copies of this assessment have been made available to the public water supplier and town boards.

Planning:

- ✓ Work with local officials in Oxford to include the facility IWPA in Aquifer Protection District Bylaws and to assist you in improving protection.
- ✓ Have a plan to address short-term water shortages and long-term water demands. Keep the phone number of a bottled water company readily available.
- ✓ Supplement the SWAP assessment with additional local information and incorporate it into water supply educational efforts. Use a land use inventory to assist in setting priorities, focusing inspections, and creating educational activities.

These recommendations are only part of your ongoing local drinking water source protection. Citizens and community officials should use this SWAP report to spur discussion of local drinking water protection measures.

4. Attachments

- Map of the Public Water Supply (PWS) Protection Area.
- Recommended Source Protection Measures Factsheet
- Your Septic System Brochure
- Source Protection Sign Order Form

